

ednet .smart home alarm for outdoor use

84297
EAN 4054007842978



ednet.smart home alarm signal for outdoor use built-in battery, 8 volume levels, 110 dB alarm signal, 433 MHz

You can also receive an audio alert if something happens in your home. You can connect motion sensors or contact sensors to objects outdoors using the ednet.smarthome Alarm Signal and receive an audio alert if the sensor detects a status change. You can use the app to set up individual rules that allow the outside areas to be monitored. Find out right away if the front door is opened, or a movement is detected in the garage. This will give you the greatest possible sense of security. You can configure the settings very easily with the ednet.smarthome app. You can set up a connection to your network and all other components using the ednet.smarthome Starter Kit. Integrate and connect as many devices in your home as you like and make it that much smarter.

Outdoor siren with 110 dB alarm signal

- 8 adjustable alarm volume levels
- Anti tamper function
- Low energy consumption
- Low battery alert
- Built-in battery
- 433 MHz radio frequency
- ednet.smart home HD Camera Gateway (84302) or ednet.smart home HD Starter Kit Security (84299) required.

Package contents

- .smart home alarm for outdoor use
- Manual

Logistics						
	Number (pcs)	Weight (kg)	Depth (cm)	Width (cm)	Height (cm)	cm ³
Packaging Unit Carton	10	9.12	75.00	84.00	34.00	214,200.00
Packaging Unit Inside	1	0.91	36.00	33.00	9.00	10,692.00
Packaging Unit Single	1	0.91	36.00	33.00	9.00	10,692.00
Net single without Packaging	1	0.64	6.00	20.00	29.50	3,540.00

More images:



